


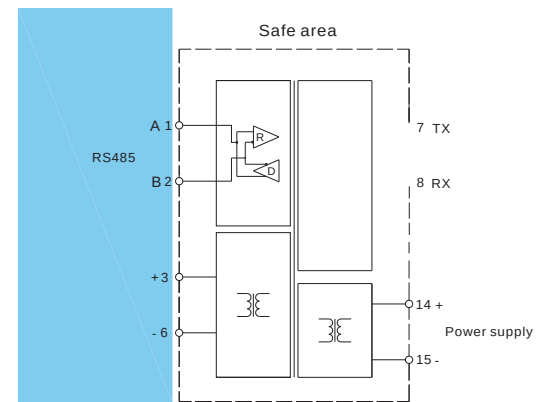

the hazardous area. shown, pull downward the springs, and rotate the safety barrier.

→ Installation

- The apparatus can be installed on the DIN 35 mm standard rail which is shown in the figure.
- As far as possible to mount it vertically, In order to dissipate the heat of the apparatus.

Vertically installation

→ Light indication

- **PWR**: Power indicator light shows green, it means work normally.
- **TX (yellow)**: The indicator flashes while data sending and turns on when sending data fails. Otherwise, the indicator turns off when normal.
- **RX (green)**: The indicator flashes while data receiving and turns on when receiving data fails. Otherwise,the indicator turns off when normal.